exagerate

Zelig Multimedia
PhotoPlayer 800x480

MANUALE

www.hamletcom.com

Informiamo che il prodotto è stato realizzato con materiali e componenti in conformità a quanto previsto dalle direttive ROHS: 2002/95/CE, 2002/96/CE 2003/108/CE; dalle Direttive RAEE: 2003/96/CE, D.Lgs. 151/2005 e dalle seguenti Direttive CE: 93/68EEC; 2004/108/EC, 92/31/EEC, EN 55022: 1998+A1+A2:2003 Class B; EN55024:1998+A1+A2:2003, EN 61000:3-2-:2005, EN 61000:3-3-:1995+A1:2001

Gentile Cliente,
La ringraziamo per la fiducia riposta nei nostri prodotti. La preghiamo di seguire le norme d'uso e manutenzione: al termine del funzionamento di questo prodotto, La preghiamo di non smaltirlo tra i rifiuti urbani misti, ma di effettuare per detti rifiuti, una raccolta separata negli appositi raccoglitori di materiale elettrico/elettronico o di riportare il prodotto dal rivenditore che lo ritirerà gratuitamente.

www.hamletcom.com

INDICE

ISTRUZIONI DI SICUREZZA 4
CARATTERISTICHE DEL PRODOTTO 6
PRODOTTO E COMPONENTI 7
NOME DEI COMPONENTI 8
COME UTILIZZARE I TASTI DEL TELECOMANDO 10
INSTALLAZIONE ED ALIMENTAZIONE 11
SELEZIONE DELLA MEMORIA 13
FOTO 15
VIDEO 16
MUSICA 18
CARTELLA 21
OROLOGIO 21
UTILIZZO DELLE VARIE VOCI DEL MENU 22
IMPOSTAZIONI 24
SLIDE SHOW 25
ORARIO 26
SVEGLIA 26
ACCENSIONE/SPEGNIMENTO AUTOMATICO 27
AUDIO 27
CONFIGURAZIONE DEL SISTEMA 28
INFORMAZIONI MEMORIA 28
VERIFICA IMPOSTAZIONI DEL SISTEMA 29
FINE 29
RISOLUZIONE DEI PROBLEMI 30

Istruzioni di sicurezza

- Non toccare l'alimentatore né il prodotto con le mani bagnate
  - Si potrebbe prendere la scossa.
  - Non utilizzare il prodotto vicino a delle fonti d'acqua.
- Tenere lontano dalla portata dei bambini
- Non appendere al muro.
  - Questo prodotto non è stato progettato per essere appeso al muro.
- Non inserire parti metalliche o carta nel terminale di lato onde evitare di prendere la scossa o di causare un incendio
- È vietato smontare il prodotto e cercare di ripararlo.
  - In caso di malfunzionamento del prodotto, leggere la sezione "Risoluzione dei problemi" presente in questa guida e seguire i consigli indicati. Nel caso in cui il problema persistesse, contattare il rivenditore.
- Se si dovessero percepire strani odori o rumori, scollegare immediatamente l'alimentatore e contattare il rivenditore.
- Si raccomanda di utilizzare solo l'alimentatore e il cavo USB in dotazione.
  - Utilizzare l'alimentatore fornito solo ed esclusivamente con questo prodotto.
- Non coprire, ostacolare la linea elettrica
  - Potrebbe scaturire un incendio o si potrebbe prendere la scossa.
- Collegare bene la spina nella presa e non utilizzare una presa di corrente danneggiata.

Istruzioni di sicurezza

- Quando non si utilizza il prodotto, si consiglia di spegnerlo e scollegarlo.
- Tenere la linea elettrica lontano dagli impianti di riscaldamento.
  - Questo per evitare corto circuiti.
- Non installare il prodotto vicino a luoghi poco sicuri
  - Inserendo qualsiasi tipo di materiale non idoneo nel prodotto, si rischia di causare corto circuiti ed incendi.
- Non installare il prodotto in ambienti in cui la temperatura è troppo bassa (sotto 0°) o al sole.
  - Se il prodotto viene esposto in luoghi con alte temperature o direttamente ai raggi del sole, potrebbe perdere la funzionalità e la qualità delle prestazioni.
- Si consiglia di staccare la spina durante i temporali
- Quando si stacca la spina si consiglia di toglierla delicatamente e tenendola in modo corretto.
- Per pulire la cornice si consiglia di staccare la spina di pulirla con un panno soffice umido.
  - Non utilizzare prodotti chimici come benzene, alchool, repellenti, lubrificanti e detergenti.
- Non far cadere il prodotto né schiacciarlo con bagagli pesanti durante il trasporto.
  - Il monitor LCD potrebbe danneggiarsi.
- Se il prodotto dovesse danneggiarsi durante l'utilizzo, spegnerlo e contattare il rivenditore
- Scollegare l'alimentazione se non si utilizza il prodotto per un lungo periodo.

Caratteristiche del Prodotto

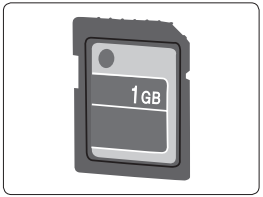

Memoria Flash

Input/output dei dati attraverso l'utilizzo della memoria

Pannello LCD

Alta risoluzione

MP3 Player

Permette di ascoltare musica con un suono di alta qualità

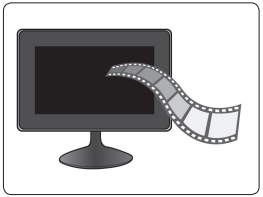

Video Player

Permette di visualizzare filmati in formato MJPEG

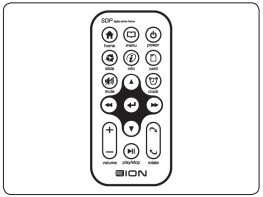

Telecomando

Offre diverse funzioni

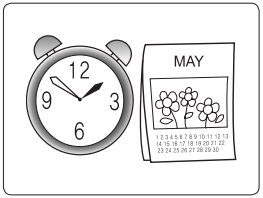

Funzioni utili Nel quotidiano

Orologio, calendario e sveglia

Comunicazione

Permette di comunicare con voce e foto

Capacità elevata della memoria interna

Immagazzina foto e file musicali nella memoria interna senza bisogno di avere una memoria supplementare

Prodotto e componenti

Cornice LCD

Telecomando

Cavo USB

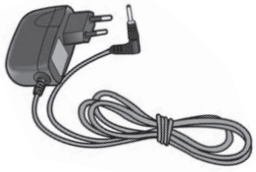

Alimentatore

Manuale

Nome dei componenti

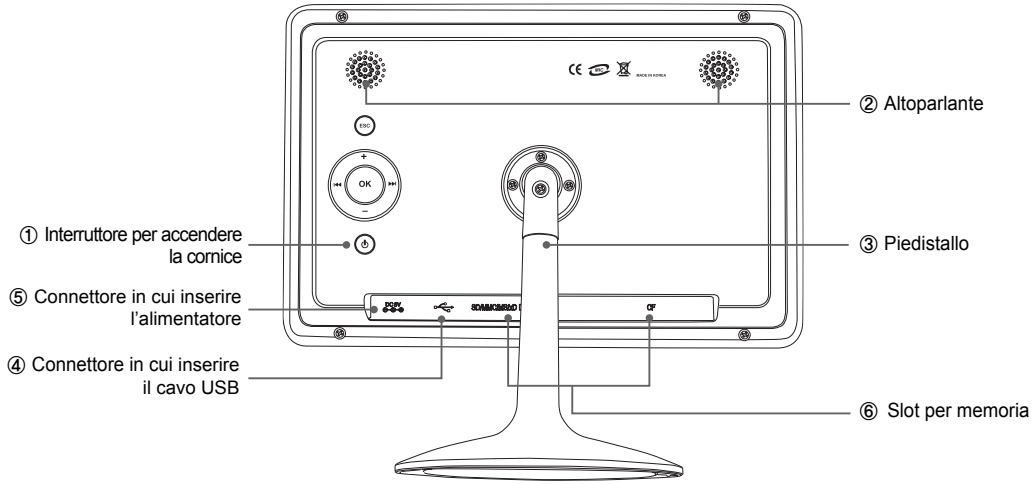
② Altoparlante
① Interruttore per accendere la cornice
③ Piedistallo
⑤ Connettore in cui inserire l'alimentatore
④ Connettore in cui inserire il cavo USB
⑥ Slot per memoria

N.	Nome	Descrizione
1	Interruttore di accensione	Accende o spegne il monitor LCD.
2	Microfono	Permette di sentire i suoni in modalità stereo quando si ascoltano i file musicali (MP3).
3	Piedistallo	Ha una struttura tale per cui il corpo della cornice può essere ruotato.
4	Connettore per cavo USB	Collegare la cornice al computer tramite il cavo USB.
5	Connettore per l'alimentatore	Collegare l'alimentatore alla cornice e alla corrente elettrica.
6	Slot per memorie	Inserire in questo slot le memorie di tipo SD/MMC/xD/SONY-MS/MS Pro/MS ProDuo o CF.

Nome dei componenti

Ci sono 5 pulsanti nella parte alta della cornice digitale

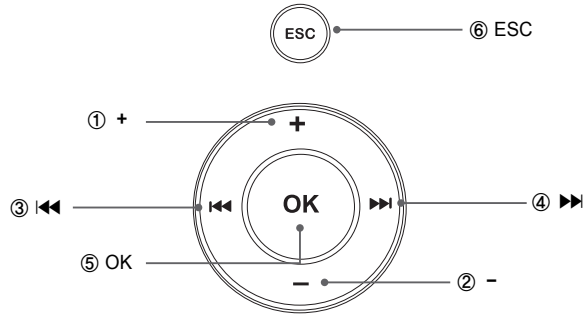

N.	Nome	Descrizione
1	+	Aumenta il volume o riporta al menu superiore.
2	–	Diminuisce il volume o riporta al menu inferiore.
3	⏮	Permette di muoversi nel menu verso sinistra o di tornare al menu precedente.
4	⏭	Permette di muoversi nel menu verso destra o di selezionare un oggetto
5	OK	Seleziona e permette di entrare in una parte di menu
6	ESC	Annulla una scelta effettuata nel menu o ritorna al menu principale

Come utilizzare i tasti del telecomando

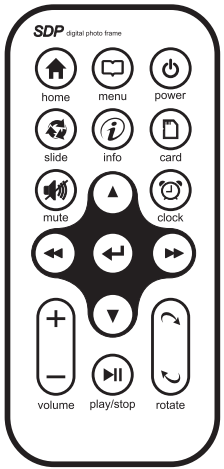

Nome	Descrizione
power	Accende e spegne la cornice digitale Exagerate.
menu	Da utilizzare per diverse funzioni..
home	Ferma l'esecuzione in corso (compreso lo scorrere delle immagini) e torna al menu principale.
slide	Avvia o ferma le diapositive/foto con musica di sottofondo.
info	Mostra a video le informazioni relative ai file.
card	Mostra che tipo di memoria è collegata.
clock	Mostra orologio e calendario.
mute	Consente di disattivare l'audio.
	Permettono di muoversi nel menu su giù, sinistra destra.
	Seleziona una parte di menu o un file.
volume	Regola il livello del volume
play/stop	Riproduce e arresta il file selezionato.
rotate	Ruota le foto a display di 90° a sinistra o a destra.

Installazione ed Alimentazione

1. Collegare l'alimentatore alla presa di corrente ed alla cornice come indicato in figura.

Nota Bene

L'alimentatore va usato con voltaggio AC 100~240V

2. Premere questo tasto per accendere la cornice; apparirà la schermata di benvenuto.

Installazione ed Alimentazione

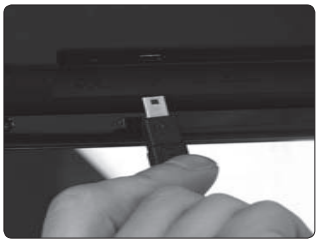

1. Prelevare i dati dal computer tramite il cavo USB in dotazione
   (foto, file musicali e filmati).

Nota Bene

Quando si collega la cornice digitale al PC per la prima volta è necessario attendere qualche minuto, affinché il computer possa rilevare la nuova periferica.

2. Prelevare i dati dalla memoria.

Selezionare la memoria collegata alla cornice Exagerate

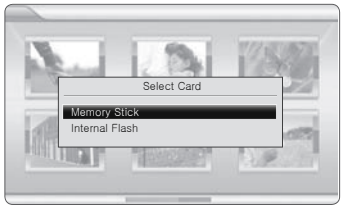

■ Selezione della memoria:

Quando si inserisce una memoria nello slot, essa viene rilevata dalla cornice Exagerate e le informazioni appaiono a video.

Nota Bene

Se nella cornice sono inserite due diverse memorie è necessario specificare quale si desidera usare.

■ Controllo dello schermo:

A video in alto a destra apparirà l'elenco delle memorie "SD, MMC, MS, CF, xD o Memory"

- Memory:Indica la memoria interna della cornice
- SD/MMC/MS/CF/xD

Selezionare la memoria collegata alla cornice Exagerate

Schermata che appare quando si effettua il collegamento

Collegare la cornice digitale EXAGERATE al PC tramite il cavo USB in dotazione : A questo punto si potrà spostare immagini, file musicali file vari dal PC alla cornice e viceversa

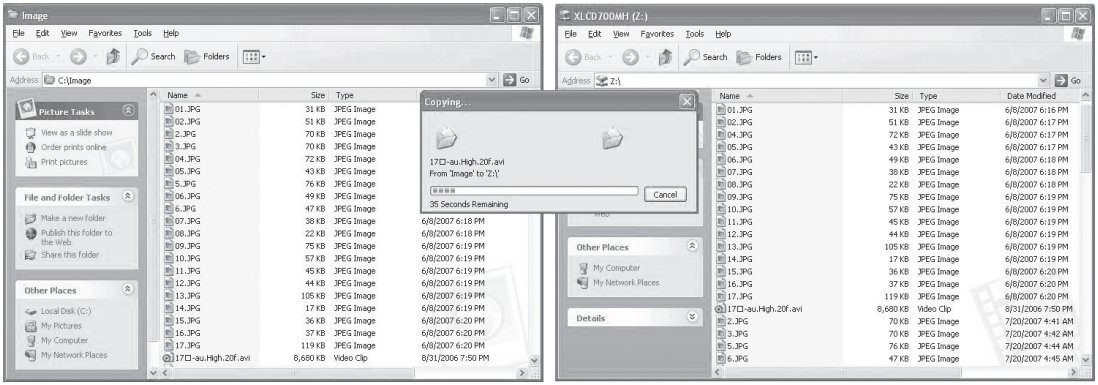

Foto

Il menu appare con queste immagini. Selezionare una di queste opzioni.

■ Menu foto

Muoversi nel menu premendo i tasti (home)((ESC)) ;
Premere i tasti ⏪⏩(|◀◀ ▶▶|) per scorrere le foto ;
il formato supportato per le foto è JPG.

■ Selezione delle immagini

Selezionare le foto desiderate utilizzando i tasti
🔼🔽⏪⏩(+ −|◀◀ ▶▶|)

■ Ruotare le foto selezionate

Cliccando questo tasto si potrà ruotare la foto selezionata in senso orario o antiorario (rotate)

Video

Utilizzando questo menu, si potranno visualizzare dei file video, musicali etc.

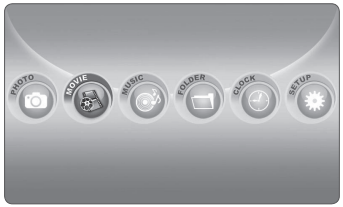

■ Menu Video

Per muoversi in questo menu utilizzare i tasti (home)(ESC)
Premere i tasti ⏪⏩(|◀◀ ▶▶|) per scorrere i file video; il formato supportato per i file video è AVI (mjpg).

■ Selezione del filmato

Selezionare il filmato desiderato utilizzando i tasti ▲▼⏪⏩(+ − |◀◀ ▶▶|)

■ Vedere il file video selezionato

Una volta scelto il file da vedere, premere i tasti ↵ o ⏯(play/stop) (OK)

Video

■ Filmato precedente/successivo

Mentre si sta guardando un file, si può passare a quello precedente/successivo premendo i tasti ⏮ o ⏭(|◀◀ ▶▶|)

■ Interrompere la riproduzione

Premere questi tasti per interrompere la riproduzione ⏯ play/stop (ESC)

■ Togliere il suono

Premere il tasto 🔇 mute per interrompere il suono durante la riproduzione.

Musica

Menu che permette di ascoltare i file MP3

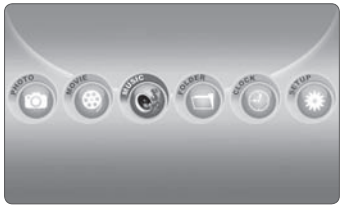

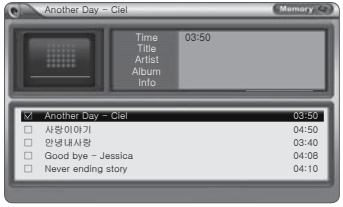

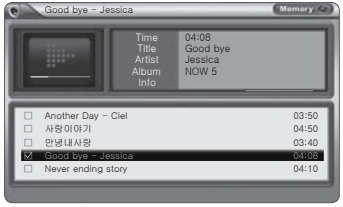

■ Menu Musica

Per muoversi in questo menu utilizzare i tasti (home) ((ESC))
Premere i tasti ((◀◀) (▶▶)) (|◀◀ ▶▶|) per scorrere i file audio.

■ Selezionare i file musicali desiderati

Selezionare i file musicali utilizzando i tasti Direzione.

■ Ascoltare i file musicali

Premere i seguenti tasti (play/stop) ((OK)) dopo aver selezionato il file desiderato.

Musica

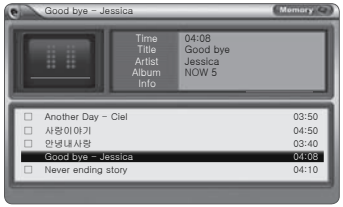

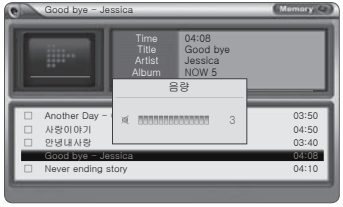

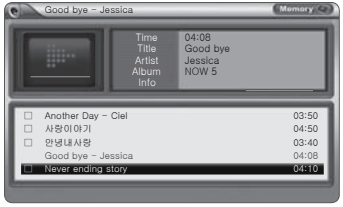

■ Fermare l'esecuzione dei file musicali

Premere i seguenti tasti (home)((ESC)) per interrompere l'esecuzione dei file musicali.

■ Togliere il suono

Se durante l'esecuzione si volesse eliminare il suono, premere questo tasto (mute)

■ Selezionare i file musicali multipli

Premere i tasti (↵)((OK)) sui file desiderati. I file appariranno selezionati col simbolo V.
Premendo il tasto (play/stop)((OK)) tutti i file selezionati verranno eseguiti.

Musica

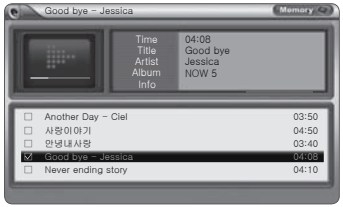

■ Ascoltare i file musicali precedenti/successivi

Durante l'ascolto di file musicali, si potrà scegliere di passare al file precedente/successivo, premendo il tasto ⏪ o ⏩ (|◀◀ ▶▶|)

Cartella

Si può visualizzare il contenuto delle cartelle.

■ Menu Cartella

Muoversi nel MENU premendo i tasti (home)(ESC)
Selezionare l'icona Cartella utilizzando i tasti ◀◀ ▶▶ (|◀◀ ▶▶|)

■ Controllo delle informazioni dei file :

Da qui è possibile vedere le informazioni dei file selezionati (titolo, dimensione file, tipo file, durata…).

Orologio

■ Menu Orologio

Muoversi nel Orologio premendo i tasti (home)(ESC)
Selezionare l'icona CLOCK/Orologio utilizzando i tasti ◀◀ ▶▶ (|◀◀ ▶▶|)

Utilizzo delle varie voci del MENU

Si potrà accedere alle funzioni disponibili usando le voci del MENU

■ Slide Show

Selezionando Slide Show si ha la possibilità di eseguire le stesse funzioni del tasto (slide) che c'è sul telecomando.

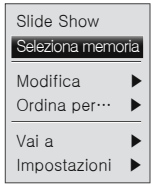

■ Seleziona memoria

Selezionando Seleziona memoria, si ha la possibilità di eseguire le stesse funzioni del tasto (card) che c'è sul telecomando

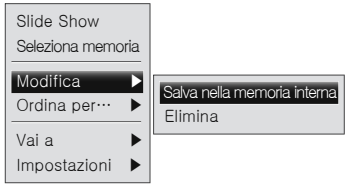

■ Modifica

Selezionando Modifica si potrà scegliere tra :

Store to Internal Storage/Salva nella memoria interna : da utilizzare per prendere/copiare dati da una memoria esterna e copiarli/muoverli nella memoria interna della cornice digitale.

Delete/Elimina : Funzione che permette di eliminare i file selezionati.

Utilizzo delle varie voci del MENU

■ Ordina per...

Selezionando Ordina per, si potrà scegliere di ordinare i file **per Nome/Data/Dimensione/ Cartella/Ordine casuale**

■ Vai a

Selezionando Vai a si può andare direttamente al menu **Home, foto, video, MP3, cartelle, orologio.**

■ Impostazioni

Selezionando Impostazioni si potrà scegliere tra :

Impostazioni : Per maggiore dettagli, si veda la sezione successiva Impostazioni

Inizializza Impostazioni : Si ripristinano tutti i valori iniziali.

Formattazione veloce : Esegue una formattazione veloce della memoria interna.

Formattare memoria interna : Esegue una formattazione normale della memoria interna (Raccomandata).

Impostazioni

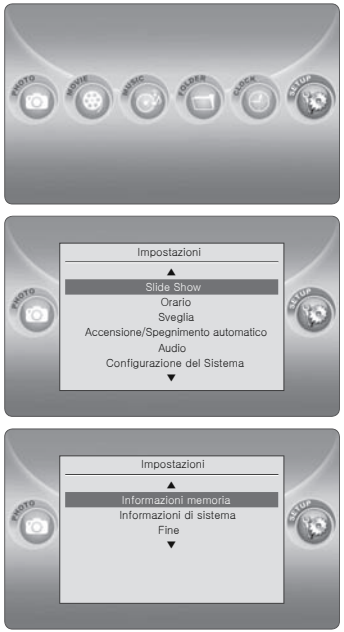

■ **Impostazioni :**

Per muoversi in questa schermata di menu utilizzare I tasti home (ESC).
Selezionare l'icona Impostazione premendo i tasti ⏮⏭ (|◀◀ ▶▶|)

Impostazioni

Slide Show

Slide Show
Intervallo di visualizzazioneal 5 minuti
Slide Show Automatico 10 minuti
Selezione effetti Intreccio
Slide Show con Mp3 Acceso
Slide Show with Clock Acceso

■ Intervallo di visualizzazione :

Si può impostare l'intervallo di scorrimento immagini. (da 1 secondo a 10 minuti).

■ Slide Show Automatico :

Se non viene premuto alcun tasto, e la cornice è accesa, parte in automatico la riproduzione delle immagini. È possibile impostare l'intervallo di cambio immagine automatica(da 5 secondi ad 1 ora).

■ Selezione effetti :

Si può scegliere diversi tipi di effetto delle immagini (All/Tutto, Fade Topdown/ Dissolvenza dall'alto in basso, Circle Rectangle/ Rettangoli in circolo, Interlace/ Intreccio, Spiral In/ Spirale in ingresso, Spiral Out/ Spirale in uscita)

■ Riproduzione con sottofondo musicale Mp3 :

è possibile scegliere di far eseguire un file MP3 mentre le immagini scorrono. (On/Acceso: il file MP3 è attivo; Off/Spento: Il file MP3 non è attivo).

■ Calendario con immagini :

Calendario con immagini: L'orario corrente ed il calendario, appaiono mentre le immagini scorrono.

Impostazioni

Orario

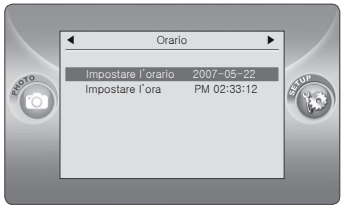

■ Impostare la data

E' possibile impostare la data nel formato: Giorno-Mese-Anno

■ Impostare l'ora

È possibile impostare da qua l'orario.

Sveglia

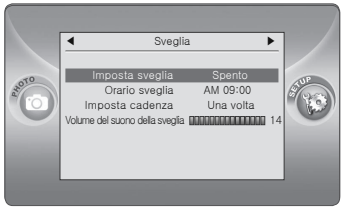

■ Imposta sveglia

È possibile attivare la sveglia.

■ Orario sveglia

Imposta l'orario preciso in cui la sveglia suona.

■ Imposta cadenza

Ogni quanto tempo la sveglia deve attivarsi.(Una sola volta, ogni giorno, settimanalmente)

■ Volume del suono della sveglia

Imposta il livello della suoneria della sveglia. Ci sono 14 diversi livelli di suoneria.

Nota Bene

L'allarme non suona se non c'è almeno un file MP3 memorizzato nella memoria interna della cornice digitale o su di una memoria esterna inserita però nello slot della cornice. (Infatti l'allarme suona un file MP3 come suono.)

Impostazioni

Accensione/Spegnimento automatico

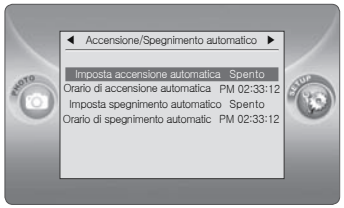
Accensione/Spegnimento automatico
Imposta accensione automatica Spento
Orario di accensione automatica PM 02:33:12
Imposta spegnimento automatico Spento
Orario di spegnimento automatic PM 02:33:12

■ **Imposta accensione automatica**
La cornice si accende automaticamente.

■ **Orario di accensione automatica**
Funzione che permette di impostare l'orario in cui accendersi.

■ **Imposta spegnimento automatico**
La cornice si spegne automaticamente.

■ **Orario di spegnimento automatico**
Funzione che permette di impostare l'orario in cui spegnersi.

Audio

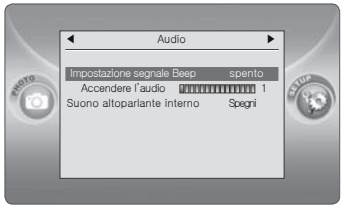

■ **Impostazione segnale Beep**
Regola il suono del segnale beep per i tasti del telecomando.
(basso, alto, spento)

■ **Accendere l'audio**
Questa funzione regola il livello del volume dell'allarme. (Si può scegliere tra 13 livelli.)

■ **Suono altoparlante interno**
Funzione che determina se utilizzare o meno il suono dell'altoparlante.

Impostazioni

Configurazione del Sistema

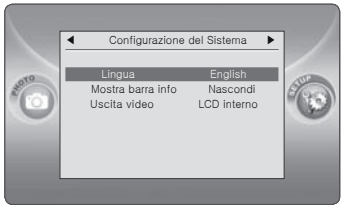

■ Lingua

Imposta la lingua da mostrare a video.
(tra Italiano, Coreano, Inglese, Cinese, Spagnolo, Tedesco e Giapponese).

■ Mostra barra info

Determina se mostrare o meno la barra delle informazioni.
(Display/Mostra/nascondi).

■ Uscita video

Il filmato è visibile solo ed unicamente sulla cornice digitale Exagerate
(non trasferibile ad unità esterna).

Informazioni memoria

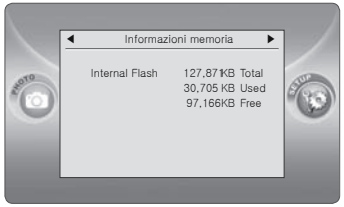

■ Informazioni memoria

Vengono visualizzate la capacità totale di memoria, la parte in uso e la parte ancora disponibile.

Impostazioni

Informazioni di sistema

Informazioni di sistema
(c) 2007, SR I-Tech, All rights Reserved
Versione Hardware SDP-708MB
Versione Software SDP-708MB-V1.1
Orario di produzione 16:29:48, Aug 21 2007

■ Verifica Impostazioni di sistema

Mostra la versione del firmware e dell'hardware in uso.

Fine

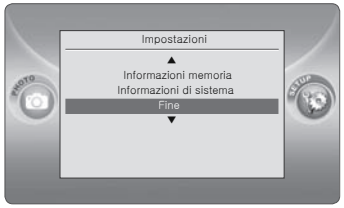

Esce dal menu Impostazioni per tornare al menu Home.
Se non si usa la funzione Fine, le impostazioni saranno salvate automaticamente.

Risoluzione dei problemi

Problema	Soluzione
Alimentatore spento	- Verificare che l'alimentatore sia collegato correttamente e alla cornice digitale e alla presa di corrente a muro.
La cornice è accesa, ma la schermata iniziale rimane fissa	- Verificare il tipo di memoria - Questa cornice supporta 5 tipi di memoria: SD/MMC/xD/MS/CF - Verificare il tipo di estensione del file: Questa cornice supporta JPG(tipo RGB), MP3 e file video.
Improvvisamente tutte le funzioni si bloccano	- Non premere alcun tasto per almeno 30 secondi (massimo un minuto): il blocco del funzionamento può essere dovuto all'elaborazione di un file molto pesante - Se il problema non viene risolto scollegarsi dal PC o scollegare la memoria e riavviare la cornice.
Il collegamento al PC non funziona (o il PC non riconosce la cornice)	- Verificare che il cavo USB sia ben collegato e che non sia danneggiato.
Impiega molto tempo a passare all'immagine successiva durante la riproduzione di immagini	- Premere il tasto menu - Impostare un tempo di scorrimento immagini più rapido.
Non si sentono gli MP3	- Premere il tasto "Mute". - Controllare che il volume sia abbastanza alto.
Il telecomando non funziona	- Controllare la batteria del telecomando, che sia carica.
La cornice non riesce a leggere i file video	- Controllare la tipologia del file video, poiché questo prodotto supporta i formati AVI.

exagerate

Zelig Multimedia
PhotoPlayer 800x480

MANUAL

www.hamletcom.com

We inform You this product is manufactured with materials and components in compliance with ROHS directives: 2002/95/CE, 2002/96/CE 2003/108/CE; with RAEE Directives: 2003/96/CE, Italian Legislative Decree 2005/151 and below EEC Directives: 93/68EEC; 2004/108/EC, 92/31/EEC, EN 55022: 1998+A1+A2:2003 Class B; EN55024:1998+A1+A2:2003, EN 61000:3-2-:2005, EN 61000:3-3-:1995+A1:2001

Dear Customer, thanks for choosing Exagerate. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to: dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.

www.hamletcom.com

CONTENTS

Safety Instructions 4
- Warning 4
- Cautions 5

Product Features 6
Product and Components 7
Name of each part 8
- The back of the product 8
- How to use the button 9
- How to use the button of remote control 10

Installation and Power connection 11
Transmitting data 12
Selecting the memory card and connecting the USB 13
- Connecting PC through USB 14

PHOT 15
MOVIE 16
MUSIC 18
FOLDER 21
CLOCK 21
Using the MENU key 22
SETUP 24
- Slide Show 25
- Time 26
- Alarm 26
- Auto Power Management 27
- Audio 27
- System Configuration 28
- Memory Information 28
- System Information 29
- Finish 29

Troubleshooting 30

Safety Instructions

Please use the product properly after reading the instructions carefully to ensure the user's safety and prevent the damage of wealth.

Warning

- Do not touch the power plug, the body, the adapter with wet hands
  - It could be the cause of electric shock.
  - Do not use it outside or near the water's edge under the snow or rain.
  - Be careful not to get wet the adapter in cleaning the floor by water.
- Keep out of the reach of children in installing
  - Children could get hurt falling off if it touched while playing.
- Do not hang on the wall.
  - This product is not designed to hang on the wall so if you hang it on the wall, which could provide the damage or make the people hurt.
- Do not insert metals such as chopsticks, a wire, a drill, a propelling pencil, blade or highly combustible substances such as the paper and match in the terminal located in the side of the product.
  - There is a risk of electric shock and the fire.
  - If you check that some kinds of foreign part are inserted, you must switch off the power and then call the C/S center and the store you bought in.
- You must not arbitrarily separate, disassemble, repair and remodel.
  - In case of malfunction and off the power, read the "troubleshooting" in the user guide and then take actions in accordance with corresponding items. Even after that, the problem still has not solved, please contact the C/S center and the store you bought in.
- If there is some kind of strange noise or smell of burning or smoke, immediately unplug the power and contact the C/S center and the store you bought in.
- Be sure to use the AC power adapter and the USB cable provided by our company.
  - The AC power adapter to be provided is only for our product, so please do not use in charging of another product.

Safety Instructions

Cautions

- Do not vent or pull, and suppress with heavy things the power line by constraint.
  - It could be the cause of electric shock and the fire.
- Put the power plug deeply to the end of inner side and do not use the damaged power plug or a loosed outlet.
- In case of movement, be sure to switch off the power and unplug the power plug from the outlet. Also move it after check whether the power cord for outside such as the connection line with other units is unplugged or not.
  - In case of movement without unplugging the power cord, the cord could be damaged and it leads the fire and the electric shock.
- Keep the power line far away from the heating units such as the heater, the furnace, etc.
  - It could be cause of electric shock due to melting the PVC sheath of the power line.
- Do not install the product around the oil, the smoke, the moisture or a place where the water(rainwater) splashing out
  - If some kind of foreign materials is inserted into the inside, which is the cause of defect, an electric shock and the fire.
- Do not install in the place where the temperature is too low (below 0℃) or inside of the car to avoid the direct sunlight.
  - If the product is exposed to high temperature or direct sunlight for a long time, it could be cause of distortion or decline of the performance.
- Unplug the power plug when thundering and lightning.
  - It could be cause of electric shock and the fire.
- When you unplug the power plug, please remove slowly with holding the handle of plug.
  - If you pull the power line, the internal wire could be cut or the cause of the fire.
- When cleaning be sure to unplug the power and rub with a soft and dry cloth.
  - Do not use chemicals such as the wax, benzene, an alcohol, a thinner, mosquito repellent, air freshener, lubricant and detergent.
- Do not threw or drop the product and the box housing the product or suppress with other heavy luggage on the box.
  - LCD and body case could be damaged.
- Clean the dust or the water certainly on the power plug.
- If the product is damaged in use, switch off and unplug, and then contact the C/S center and the store you bought in.
- Unplug the power plug when it is not used for a long time and keep it in the packing box.
  - If the dust is collected, it could be cause of electric shock, a leak and the fire due to heating, the ignition and the insulation.

Product Features

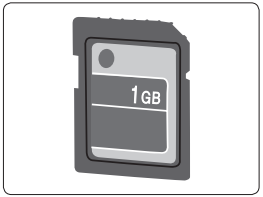

Flash memory device

Input/output of the data via flash memory card

High quality LCD panel

Use LCD panel of which is a video device for next generation (Slim, High resolution)

MP3 Player

Perform the high quality stereo sounds data

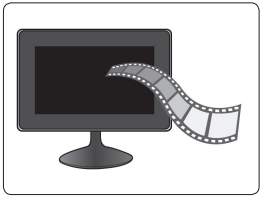

Video Player

Plays back video for MJPEG

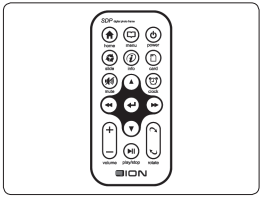

Remote control

Conveniently operates available functions

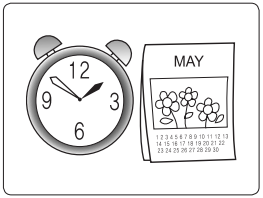

Convenient function for life

Clock, calendar view, alarm setting function

Role as a messenger

Deliver the contents that you want to extend as usual with the photo and the voice simultaneously.

High capacity of the internal memory

Store the photo and the music file in the internal memory and have an appreciation of them without additional memory card.

Product and Components

This product is organized with following items. Please check the contents clearly.

Body

Remote control

USB Cable

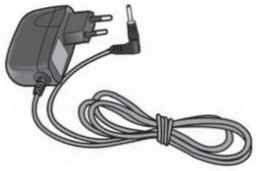

The adapter

Manual

Name of each part

The back of the product

It describes the appearance and the name of each part. It maybe has some difference in appearance and function depending on the option.

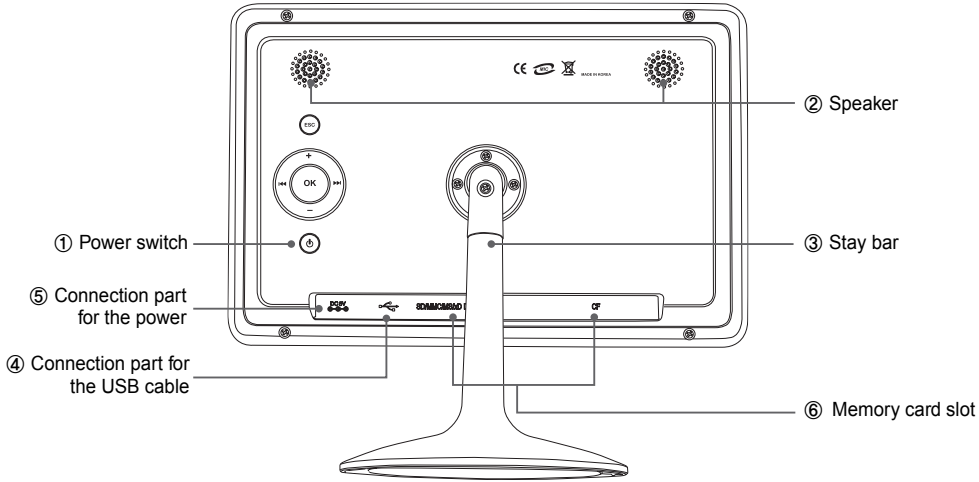

No.	Name	Description
1	Power switch	Switch the power on or off.
2	Speaker	Output the stereo sound when playing the music file(MP3).
3	Stay bar	Made with ballhead method so the body can be rotated freely.
4	Connection part for the USB cabl	Use connecting to PC using the USB cable.
5	Connection part for the power	Use connecting the adapter provided with the body.
6	Memory card slot	Use inserting SD/MMC/xD/SONY-MS/MS Pro/MS ProDuo or CF memory card.

Name of each part

How to use the button

There are 5 buttons in the upper part of the product. This describes the name and function of each button as follows.
It maybe has some difference in appearance and function depending on the option.

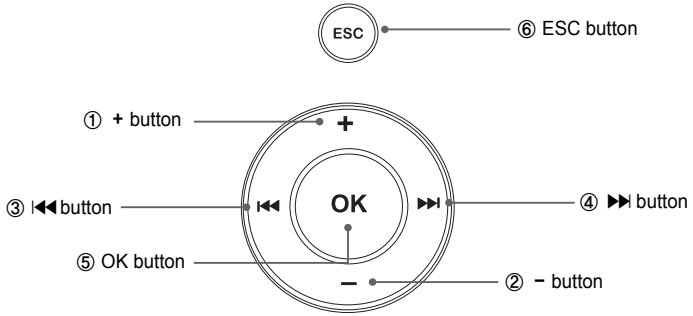

No.	Name	Description
1	+ button	Increases the volume level or moves to the upper menu.
2	– button	Decreases the volume level or moves to the lower menu.
3	I◀◀ button	Moves to the menu on the left or moves to the previous menu.
4	▶▶I button	Moves to the menu on the right or selects an item.
5	OK button	Selects or applies a menu.
6	ESC button	Cancels a selected menu, or moves to the main menu.

Name of each part

How to use the button of remote control

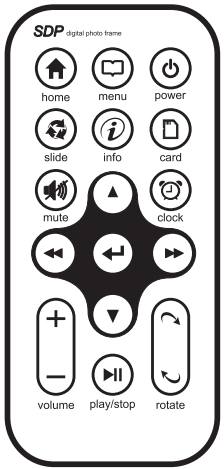

Name	Description
power	Turns the product on or off.
menu	Used to run various functions and change the previous settings.
home	Stops the previous function (including Slideshow) and moves to the home menu.
slide	Starts or stops the slideshow with background music.
info	Displays the active file's information.
card	Displays the types of the connected memory cards for you to select any of the connected memory cards and embedded memory devices
clock	Displays the clock and calendar.
mute	Switches the sound off.
	Moves up, down, left, or right on the menu or file list.
	Selects a menu or file to run it.
volume	Adjusts the volume level.
play/stop	Plays back the selected file or pauses the playback.
rotate	Rotates the displayed photo 90 degrees to the left or to the right.

Installation and Power connection

1. Connect the adapter with connection part of the back for the power. Connect the power plug of the adapter with the outlet.

Note

The adapter can be used in AC 100~240V

2. Push the power switch.
   And then LCD screen is on and the DION logo is displayed.

Transmitting data

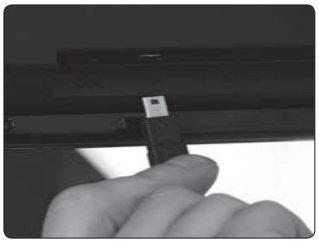

1. Fetching the data stored on PC such as photos, musics, and movies

Note

In case of connection between PC and the product at first, some time is required (about 1 or 2 minutes)

2. Fetching the data from the external memory device

Selecting the memory card and connecting the USB

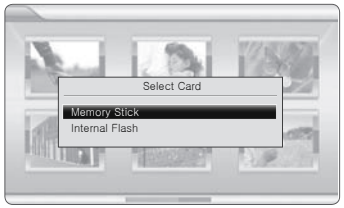

■ Selecting the memory card

When you insert a memory card, the information of it is displayed.
Note that you have to use the memory card selection menu to choose one when both two slots have memory cards.

■ Checking the screen

The screen displays“SD, MMC, MS, CF, xD or Memory” at the upper right.

- Memory card screen: SD/MMC/MS/CF/xD Card
- Internal memory screen: Memory

Selecting the memory card and connecting the USB

Connecting PC through USB

When connecting your PC through USB

You can store pictures, moving images, and music files on your PC after connecting through the USB cable. Of course you can store them in the built-in memory.

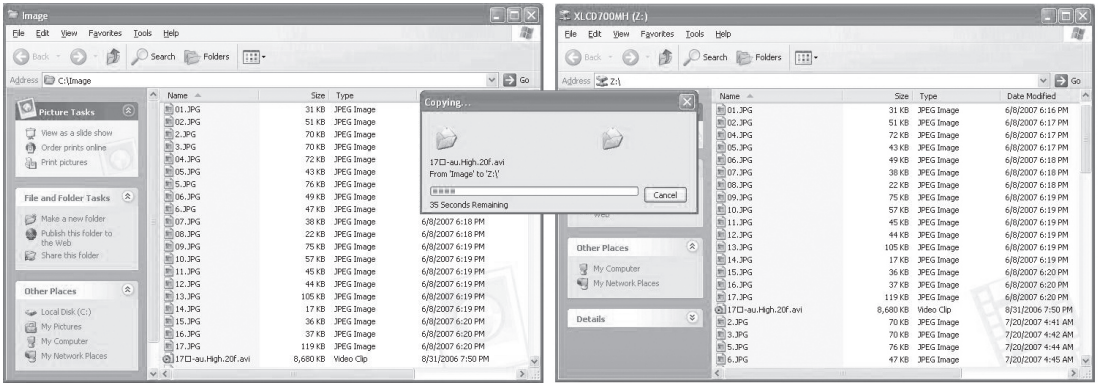

When sending data from PC to DION

PHOTO

The preview displays available pictures. Select any of them to see in the digital photo frame.

※Parenthesis( ) is the button of the main body.

■ Moving to the PHOTO menu

Move to the MENU screen by pressing the home (ESC) button
Press the PHOTO button after using the ◀◀ ▶▶ (|◀◀ ▶▶|) buttons.
Photo format supportable → JPEG (jpg)

■ Selecting the desired photo

Select the desired photo using the ▲ ▼ ◀◀ ▶▶
(+ − |◀◀ ▶▶|) buttons.

■ Rotating the selected photo

After selecting the photo you want, press the rotate button to rotate it clockwise or counterclockwise.

MOVIE

Using this menu, you can play back movies such as digital camera images, music albums, etc.

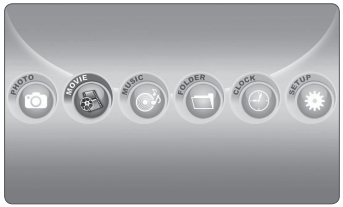

■ Moving to the MOVIE menu

Move to the MENU screen by pressing the home (ESC) button
Select the MOVIE button after using the (|◀◀ ▶▶|) buttons.
Movie format supportable → AVI (mjpg).

■ Selecting the desired movie

Select the desired movie using the (+ −|◀◀ ▶▶|) buttons.

■ Playing back the selected movie

After selecting a movie file, press the ↵ or play/stop (OK) button.

MOVIE

■ Playing back the previous/next movie

During playback, you can move to the previous or next movie by pressing the ⏮ or ⏭ (|◀◀ ▶▶|) buttons.

■ Stopping the playback

Press the ⏯ (play/stop) (ESC) button to stop the playback.

■ Turning off the sound

Press the 🔇 (mute) button to turn off the sound during playback.

MUSIC

It plays back the MP3 files.

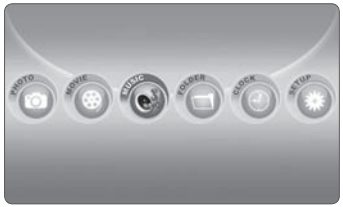

■ Moving to the MUSIC menu

Move to the MENU screen by pressing the home (ESC) button
Select the MUSIC button after using the (|◀◀ ▶▶|) buttons.

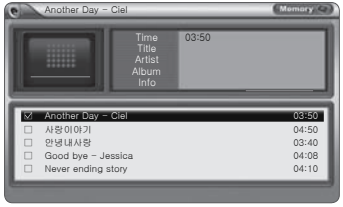

■ Selecting the desired music file

Select the desired music file using the Direction buttons.

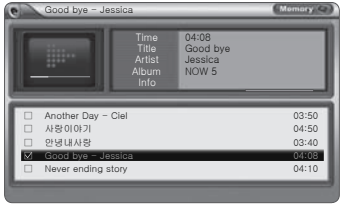

■ Playing back the selected music file

Press the play/stop (OK) button after selecting the desired music file.

MUSIC

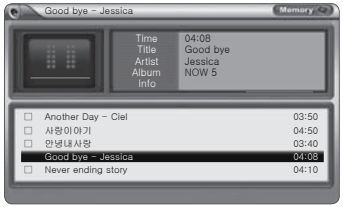

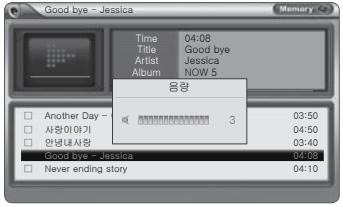

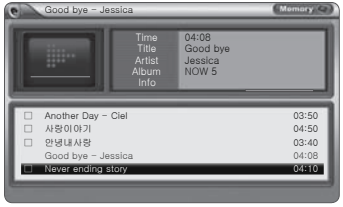

■ Stopping the music

Press the home (ESC) button during playback.

■ Turning off the sound

Press the mute button to turn off the sound during playback.

■ Selecting multiple music files

Press the ↵ (OK) button on the desired files. The files are displayed with V marks.
When you press the play/stop (OK) button, all the marked files are played back.

MUSIC

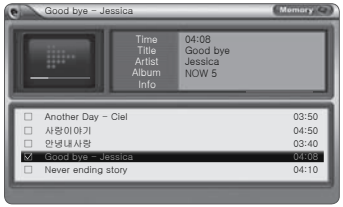

■ Playing back the previous/next music

During playback, you can move to the previous or next music by pressing the ⏪ or ⏩ (|◀◀ ▶▶|) buttons.

FOLDER

You can play back the files in the desired folder.

■ Moving to the FOLDER menu

Move to the MENU screen by pressing the (home)((ESC)) button during playback
Select the FOLDER button after using the (◀◀ ▶▶) button.

■ Checking the file information

You can see the information of the selected file

CLOCK

■ Moving to the CLOCK menu

Move to the MENU screen by pressing the (home)((ESC)) button.
Select the CLOCK button after pressing the (◀◀ ▶▶) button.

Using the MENU key

You can access available functions using the MENU key.

■ Slide Show

After pressing the MENU key, select Slide Show.
It works the same as the slide buttons.

■ Selecting the memory card

After pressing the MENU key, select Select Card.
It works the same as the card buttons.

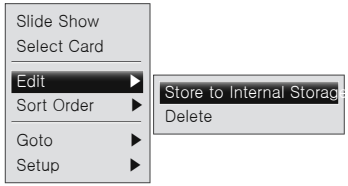

■ Editing

After pressing the MENU key, select Edit.

Store to Internal Storage : Used to moving or copying data from an external memory card to the internal memory.

Delete : Used to delete the selected file.

Using the MENU key

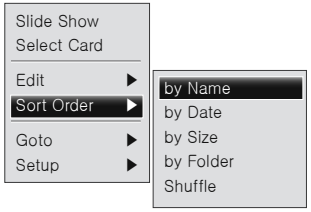

■ Sort Order

After pressing the MENU key, select Sort Order.
You can sort the files **by Name/Date/Size/Folder/Shuffling**

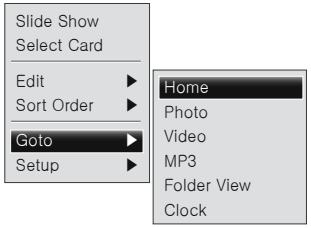

■ Changing the screen

After pressing the MENU key, select Goto.
You can move to any screen of **Home, Photo, Video, MP3, Folder View, Clock.**

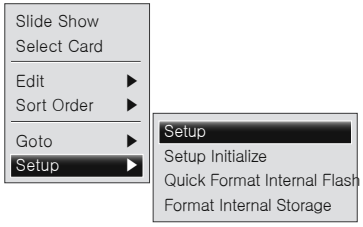

■ Setup

After pressing the MENU key, select Setup.
Setup : For more details, see page 24 to 29.
Setup Initialize : It returns the initial values.
Quick Format Internal Flash : It performs a quick format.
Format Internal Storage : It performs a normal format. (Recommended)

SETUP

It can configure multiple environmental settings.

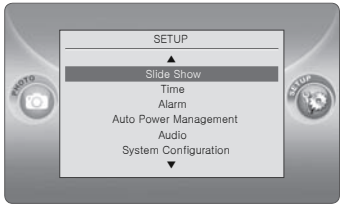

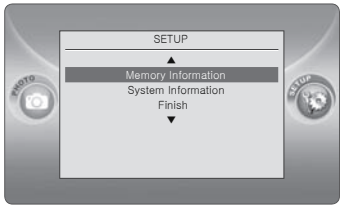

■ Moving to the SETUP menu

Move to the MENU screen by pressing the (home) (ESC) button.
Select the SETUP button after pressing the ◀◀ ▶▶ buttons.

SETUP

Slide Show

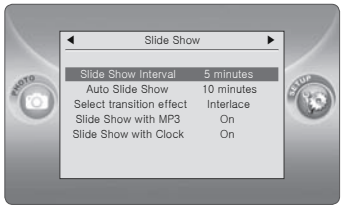
Slide Show
Slide Show Interval 5 minutes
Auto Slide Show 10 minutes
Select transition effect Interlace
Slide Show with MP3 On
Slide Show with Clock On

■ Slide Show Interval

You can set the interval for slide show. (1 sec to 10 minute)

■ Auto Slide Show

When no button is pressed after the power is on, the auto slide show starts. It sets the interval for auto slide show. (5 sec to 1 hour, Off)

■ Select transition effect

You can select any of various slide effects.
(All, Fade Topdown, Circle Rectangle, Interlace, Spiral In, Spiral Out)

■ Slide Show with MP3

An MP3 file is played back while the slide show is running.
(On : MP3 playback is active; Off : MP3 playback is not active)

■ Slide Show with Clock

The current time and calendar appears while the slide show is running.

SETUP

Time

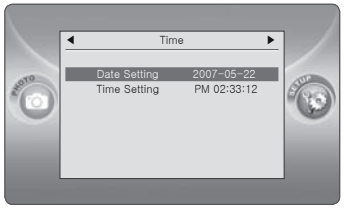

■ Date Setting

It sets the date: Year-Month-Day.

■ Time Setting

It sets the current time.

Alarm

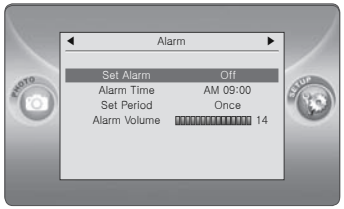

■ Set Alarm

It determines whether or not to use the alarm function.

■ Alarm Time

It sets the alarm time.

■ Set Period

It sets the alarm interval.
(Once, Daily, Weekly)

■ Alarm Volume

It sets the volume level of alarm.
You can set any of 14 volume levels.

Note

The alarm does not sound when no MP3 file exists in the built-in memory or the inserted memory card.
(The alarm clock plays an MP3 file as alarm sound.)

SETUP

Auto Power Management

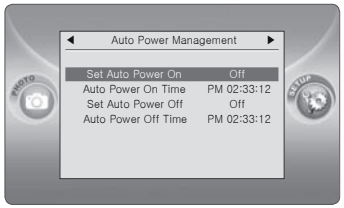
Auto Power Management
Set Auto Power On Off
Auto Power On Time PM 02:33:12
Set Auto Power Off Off
Auto Power Off Time PM 02:33:12

■ Set Auto Power On

It automatically turns the power on.

■ Auto Power On Time

It sets the time for the Auto Power On function.

■ Set Auto Power Off

It automatically turns the power off.

■ Auto Power Off Time

It sets the time for the Auto Power Off function.

Audio

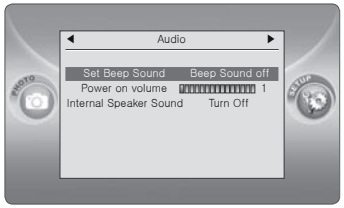

■ Set Beep Sound

It sets the beep sound for the remote control buttons.
(Beep Sound Low, Beep Sound High, Beep Sound Off)

■ Power on volume

It sets the volume level of alarm. (You can set any of 13 volume levels.)

■ Internal Speaker Sound

It determines whether or not to use the internal speaker sound.

SETUP

System Configuration

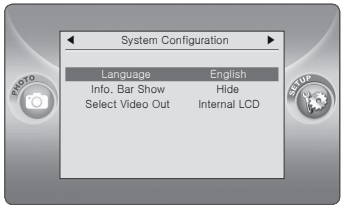

■ Language

It sets the language to be displayed on the screen.
(It supports Italian, Korean, English, Chinese, Spanish, German and Japanese basically.
The other language is option fact.)

■ Info. Bar Show

It determines whether or not to display the information bar at the bottom.
(Display/Auto/Hide)

■ Select Video

Video Out is adjusted internal LCD for current model.

Memory Information

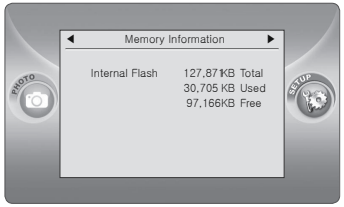

■ Memory Information

The memory capacity and free memory space are also displayed.

SETUP

System Information

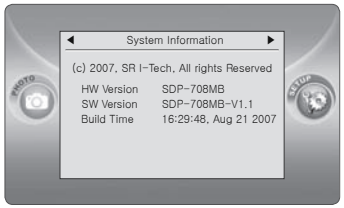
System Information
(c) 2007, SR I-Tech, All rights Reserved
HW Version SDP-708MB
SW Version SDP-708MB-V1.1
Build Time 16:29:48, Aug 21 2007

■ Checking the system information

You can see the versions for firmware and hardware.

Note

The Firmware Upgrade uses the headquarters of a party home page.
www.s-dion.com

Finish

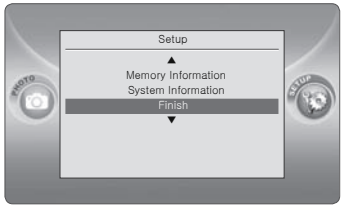

It exits from the Setup to return to the Home menu.

Note

f it does not use the Finish function, the settings is stored with automatic.

Troubleshooting

Problem	Solution
Power remains turned off.	- Check the plug-insertion hole of the adapter, adapter itself, and connection status between adapter and outlet.
Power is on but the initial display still remains.	- Check the type of memory card. - This product supports 5 kinds of memory cards such as SD/MMC/xD/MS/CF. - Check the filename extension when the connection between memory card and power is normal. (This product supports JPG(RGB type), MP3, Video files only.)
Suddenly all operations are stopped.	- First stop the button operations and wait for over 30 seconds (up to 1 minute). Delay can occur when the processing speed is lowered by a high capacity file. - When this phenomenon continues, disconnect PC or memory card and then startup and reboot the product.
It takes a long time to move to the next photo in the slide show.	- Press the menu button. - About under moving it presses the Select button in the slide show. - It sets a slide show interval shortly.
You cannot hear MP3 sound.	- Press 'Mute' Button. - It raises the UP button a volume.
Menu is not shown even after pressing the Menu button.	- In order to implement photos on the screen, it also requires optimization process, so its speed can be lowered.
The remote control doesn't operate.	- Check the battery status. - Any foreign materials (particularly liquid) in the remote control may cause a problem. Exchange it from the purchasing site if necessary.
The product cannot read video files or abnormally plays back them.	- The file encoded with other codecs than the supported one may not normally operate. This product will upgrade with additional codecs in near future. (Most digital cameras support the MJPEG codec.)

exagerate

www.hamletcom.com